






APPLICATION GUIDE

Step 1: Apply

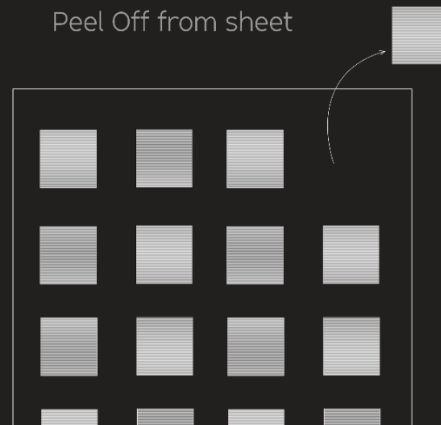


- Peel GlassOn from the sheet.
- Apply GlassOn to area beside your glasses hinges. Try first with "Standard", or if your glasses are too tight use "Thin". Give it a couple days to see if it is comfortable.
- Try to apply the padding as low as possible.

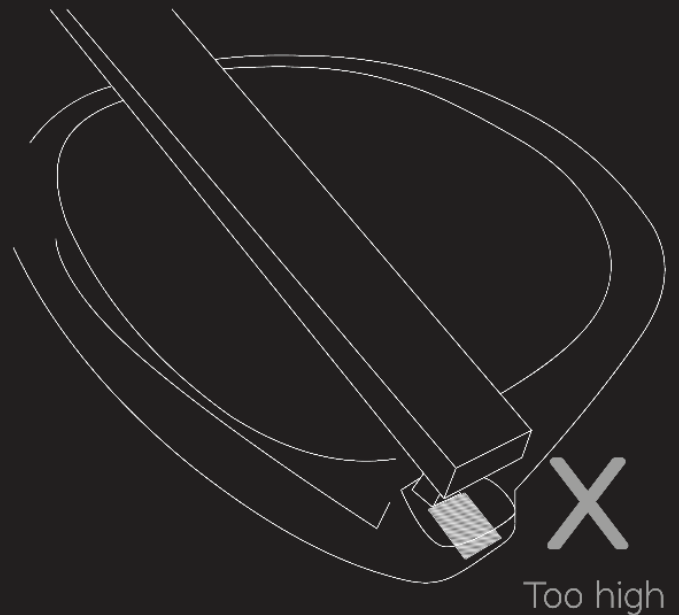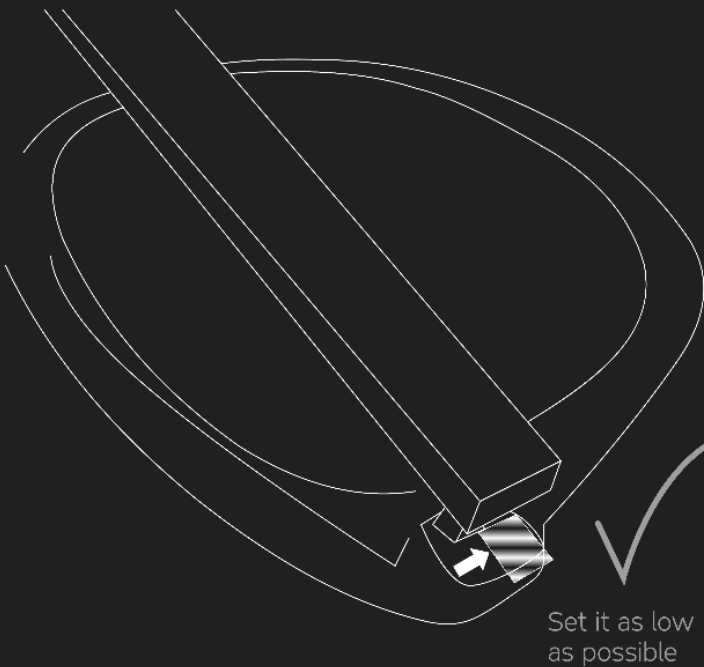

Step 2: Trim

- Trim excess materials using provided clippers.
- Discard the excess materials.

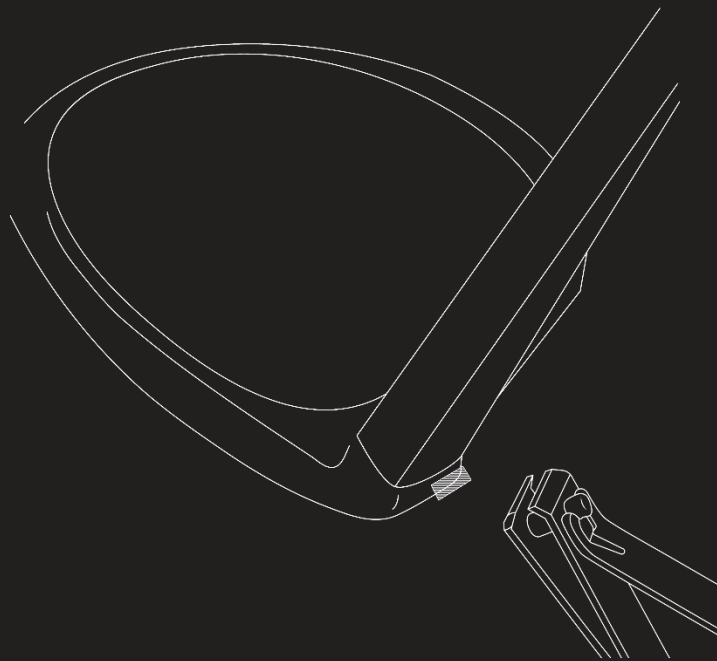

Step 3: Adjusting Thickness


How to Add Thickness

Start by stacking a "Thin" padding on top of your glasses' existing padding. Only add padding to one side at a time, then try on your glasses to see if they feel snug enough.

If they're still not snug after adding a "Thin" padding, you can try applying "Standard" padding. Give it a couple days.

If Your Glasses Are Too Tight


If your glasses feel too tight, simply remove the padding you just added. Alternatively, you can swap any existing padding for a "Thin" one.

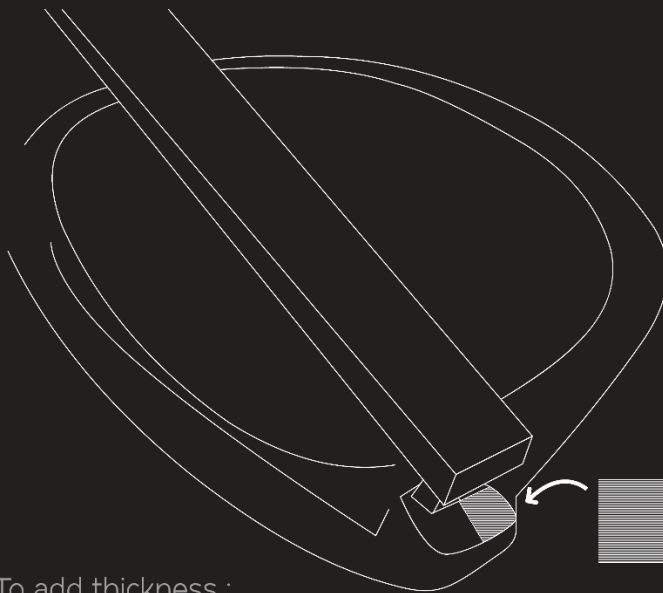

To add thickness :
Apply padding on top of existing ones.

Tips:


How To Fix Paddings Sliding Out?

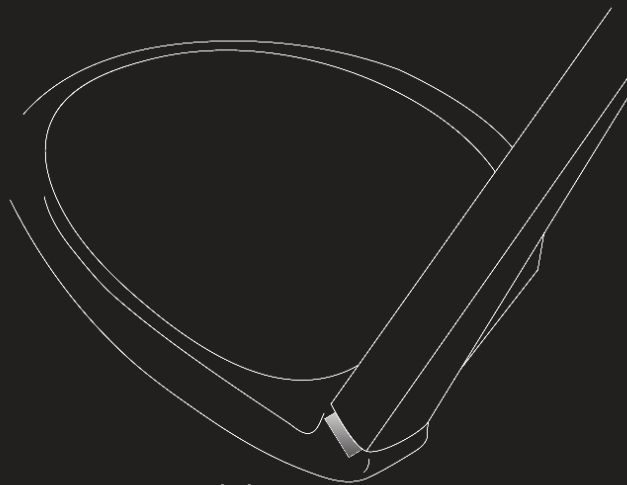

GlassOn padding may slide out for some glasses.

To fix this, remove then reattach the padding to lowest position.

Is your padding sliding out?

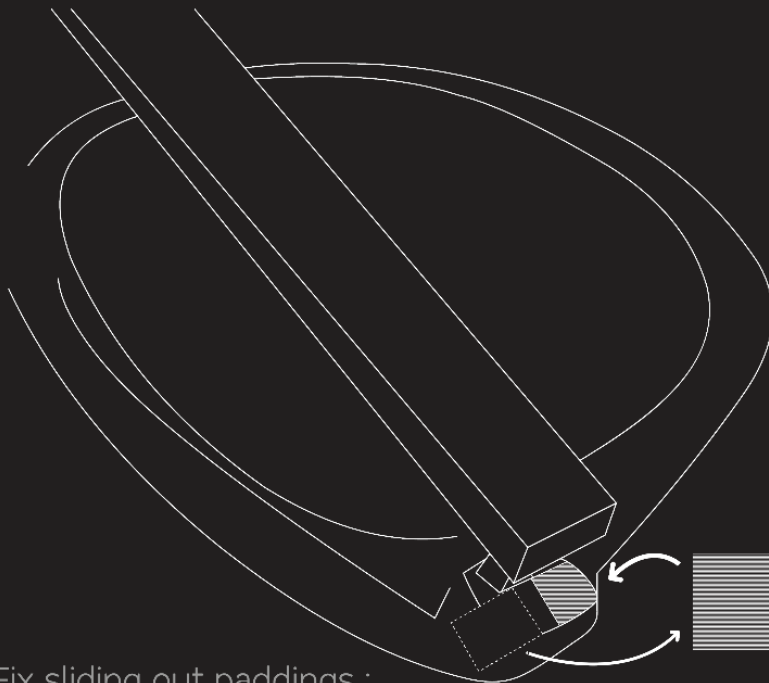

Fix sliding out paddings :
Remove and reattach to lower position.